 


Parts Catalog

BJ-10sx

Canon

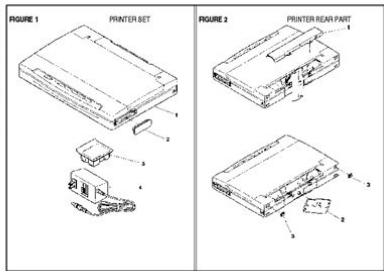

NUM. PART #	DESCRIPTION	NUM. PART #	DESCRIPTION
1-2	C42-0529-000 CAP, CONNECTOR	2-1	C81-1080-000 COVER, BATTERY (WHITE)
		C81-1082-000 COVER, BATTERY (BLACK)	
		2	C81-1061-000 STAND, PRINTER (WHITE)
		C81-1060-000 STAND, PRINTER (BLACK)	
		3	C42-0807-000 FOOT, RUBBER (BLACK) (2)
		C42-1039-000 FOOT, RUBBER (WHITE) (2)	

1 of 9

File Name: Canon bj-10sx manual.pdf

Size: 4197 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 6 May 2019, 13:58 PM

Rating: 4.6/5 from 732 votes.

Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA
Privacy - Terms

Book Descriptions:

Canon bj-10sx manual



It offers exceptional print quality and troublefree operation with the convenience of compact size, low cost, and portability. We appreciate your choosing this portable printer to meet your printer needs. This chapter introduces you to features of your new printer and describes how to use this Users Manual. Features and Benefits The Bubble Jet Printer BJ10sx produces highquality printing by Convenient paper handling You can print on paper, envelopes, or transparencies. An optional sheet feeder is available for automatically feeding stacks of paper Software compatibility Two resident printer control modes allow the printer to emuContents This manual includes all the information you need to set up and operate your printer in several easytoread chapters. Chapter 1, Introduction Introduces you to the features of the printer, and describes how this manual is organized. Chapter 2, Setting up the Printer Describes the printers components, and how to unpack and assemble it. Chapter 3, Using the Printer Describes how to select a location The appendices include printer specifications, interface specifications, and summary tables of the BJ10e mode and Epson LQ mode printer commands and characters sets. At the back of this manual, youll find a Quick Reference card. To detach the card, cut along the dotted line at the left side of the card; then fold the card down the center. Take this Quick ReferenIf you have any questions regarding the installation or use of your new printer, dont hesitate to call the Canon Computer Systems Technical Support help desk at 18004232366. Assistance is available Monday through Friday from 9 am to 9 pm, Eastern Standard Time EST, except on holidays. If you seem to have an operational problem, try to solve it by referring to the information in Chapter 7, TroIt offers guidelines for using the printer, explains how to install the ink cartridge, and describes how to connect the AC adapter and the interface cable.<http://www.dentamaks.ru/userfiles/dodge-aries-manual.xml>

- **canon bj-10sx manual, canon bubble jet printer bj-10sx manual, canon bj-10sx**

manual.




If you have already set up your printer using the Quick Start Guide included in the box, you may want to scan this chapter for the additional information that it supplies. Unpacking the Printer Carefully remove all items from the printer, save the carton and packing materials in case you want to ship or store the printer in the future. Remove all shipping tape and any styrofoam packing material See Chapter 4, Using the Operator Panel, for complete information on these buttons and lights. Top cover The top cover is open when feeding paper or accessing the inside of the printer. Parallel interface port The printer's interface cable connects to this port. Battery cover This cover protects the optional battery pack. Ink cartridge holder You install the ink cartridge on this yellow holder as described later in this chapter. Ink cartridge lock lever This lock lever secures the ink cartridge. Paper release lever This lever releases the loaded sheet of paper. You lift this lever to clear a paper jam. Leave the lever in the down position when you are printing. For information about changing the factory default settings, see Chapter 8, Customizing the Printer. Assembling the Printer Now that you are familiar with the components of your printer, you are ready to set up the printer and connect to your computer. The first step is to install the ink cartridge. Installing the Ink Cartridge The ink cartridge you use with the printer is BC01. Each ink cartridge contains enough ink to print about 600 pages. CAUTION Keep the ink cartridge out of the reach of children; the ink contains isopropyl alcohol. To install the ink cartridge, follow these steps 1. Grasp the ink cartridge so it makes contact with the circuit board on the cartridge holder. CAUTION Do not move the ink cartridge after installing it. Moving the ink cartridge to the right and leaving it there may uncap the print head and cause it to dry out. 9. Close the inner cover. <http://www.agriturismomonteistulargiu.com/userfiles/dodge-aries-manual-transmission.xml>



Press on each side until it snaps into the closed position. 10. Lower the top cover and press on each side to close it securely. Whenever you t. Choosing a Location for Your Printer. 23 Loading Paper. 24 Using the Printer On a Daily Basis. 31 Traveling With the Printer. 32 Using the Operator Panel. Chapter Turning On the Printer. 35 Pausing a Print Operation. Appendix Printer Mode Command Summaries and Character Sets. BJ10e Command Summary. 109 BJ10e Character Sets. 116 Epson LQ Command Summary. 120 Epson LQ Character Sets. 125 Glossary. It offers exceptional print quality and troublefree operation with the convenience of compact size, low cost, and portability. We appreciate your choosing this portable printer to meet your printer needs. It also includes helpful hints for using the printer on a daily basis and traveling with the printer. The appendices include printer specifications, interface specifications, and summary tables of the BJ10e mode and Epson LQ mode printer commands and characters sets. Canon also provides a bulletin board service BBS. To find out the number for the BBS, call the help desk. For CompuServe members, Canon provides the Canon Peripherals Forum. If you have already set up your printer using the Quick Start Guide included in the box, you may want to scan this chapter for the additional information that it supplies. Remove all shipping tape and any styrofoam packing material used to protect the printer during shipping. Remove the protector cover the parallel port on the right side of the printer. The various lights on the operator panel indicate the status of the printer and identify the print mode youve selected. See Chapter 4, Using the Operator Panel, for complete information on these buttons and lights. Battery cover This cover protects the optional battery pack. Battery switch This switch turns on the optional battery pack if it is installed.

Ink cartridge holder You install the ink cartridge on this yellow holder as described later in this chapter. CAUTION Canon makes two ink cartridges that would fit the printer; the BC01 is designed specifically for the Bubble Jet Printer BJ10sx. Therefore, use only the BC01 cartridge with. CAUTION Avoid touching the yellow mounting base on which you place the cartridge especially the circuit board on the side of the mounting base and the film cable that extends from the carriage holder. If you unplug the printer while it is printing, or if you move the ink cartridge from the home position, the cartridge will not be capped and it may dry out. Always plug the AC adapter into the printer before you plug it into an electrical outlet. If necessary, obtain an appropriate AC adapter from your Canon dealer. You can also call the Canon help desk at 18004232366. The POWER light comes on, and the printer makes several sounds as it gets ready to print. CAUTION Never unplug the AC adapter when the power is turned on. It blinks for about five seconds while the printer cleans the print head. When complete, the ON LINE indicator light stops blinking and goes off. Choosing a Location for Your Printer Whether at home, in the office, or traveling, you need to find a comfortable and convenient location for the printer. Single sheets of paper are loaded from the top of the printer with the top cover open. Make sure the printers location is near an electrical wall outlet that accepts a threeprong, grounded plug when you are using the AC adapter. To load multiple sheets of paper, you must install the optional sheet feeder. See Chapter 9, Installing and Using Options, for details. The ERROR light comes on because there is no paper in the printer. 5. Make sure the paper release

lever on the right side of the printer is pushed down. Paper will not feed correctly if the lever is up 6. Envelopes with letters enclosed Use transparencies that are intended for use with ink jet printers only.

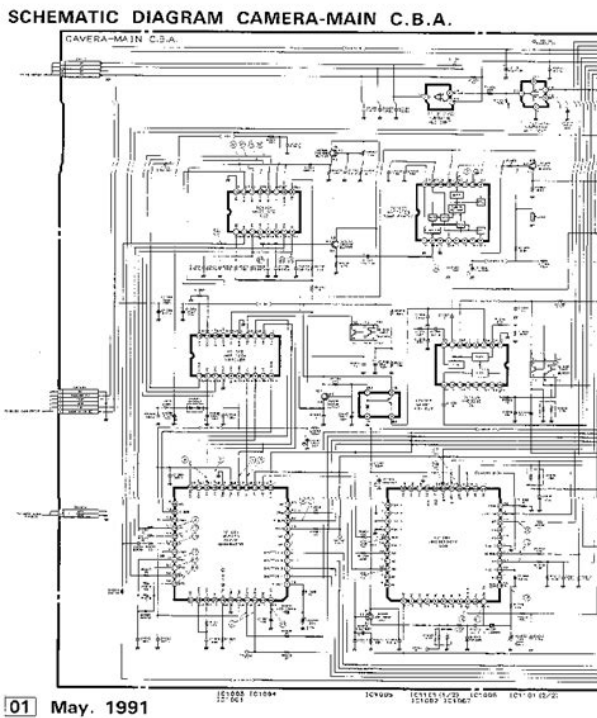


<http://www.raumboerse-luzern.ch/mieten/3x1-optical-audio-toslink-bi-directional-manual-switch>

You can also use CG3480 transparency film from NOTE Always feed transparencies from the bottom slot on the printer. The ERROR light comes on because there is no paper in the printer. 6. Set the paper thickness dial to the bottom position envelope icon. Canon makes numerous ink cartridges; the BC01 is designed specifically for the Bubble Jet Printer BJ10sx. Therefore, use only the BC01 cartridge with this printer. After installing a new ink cartridge, always perform the print head cleaning procedure. Keep the inside of the printer clean and dust free; use canned air to clean the inside of the printer. Therefore, do not remove the ink cartridge. An opened ink cartridge that is not installed in the printer may leak, and the print head may dry out. After installing an ink cartridge, always leave it in the printer. Turning On the Printer Press and hold the POWER button to turn on the printer. The POWER light comes on. When the printer is ready to print, the ON LINE light comes on. You can perform a form feed or a line feed, or you can eject a sheet of paper. If you want to print a draft document, you can change the print mode to economy and save ink. In this mode, the printer uses less dots to form a character and uses less ink. In economy mode, your printed document will appear lighter. The printer restores the default setting of 10 cpi, and you can start over. NOTE If you cannot remember the font style you have selected, press the PITCH button until the printer beeps twice. The printer sounds 5. Repeat steps 3 and 4 for each font style you wish to select. This 6. Press ON LINE to set the printer online. The printer sounds a Turning off a font style Follow these steps to turn off a font style 1. Use these test prints to check the operation of the printer. Self Test You can print the self test in both printer control modes BJ10e mode or Epson LQ mode. The ON LINE indicator light blinks. When the self test is paused, you can press ON LINE to set the printer online.



The printer positions the sheet of paper. 6. Press the ON LINE button. The printer starts to print the font list. Stopping the font list To stop printing the font list, press the ON LINE button. NOTE If you are using any other version of Windows, call the Canon help desk at 18004232366 and ask them to send you the appropriate driver for your software. Program Manager. NOTE If you are using any other version of Windows, call the Canon help desk at 18004232366 and ask them to send you the appropriate driver for your software. Program Manager. This program is located in the printers control panel. Select the Setup button. Click on Options in the main dialog box to display the Options. If you find Canon BJ10sx, BJ10e, or BJ 10ex on the list, select it. This gives you the fullest range of features. If they are unable to assist you, please call the Canon help desk at 18004232366 to see if a driver is available. BJ10e mode is the default. If you select a Canon BJ printer or the IBM Proprinter X24E through your application program, use the printer in BJ10e mode. This mode gives you the fullest range of features. If they are, the application printer driver is overriding the commands. Each ink cartridge contains enough ink to print about 400 to 500 pages 700,000 characters in HQ mode, and 800 to 1000 pages 1,400,000 characters in economy mode. The actual amount varies according to the print density of a page. CAUTION Canon makes two ink cartridges that fit the printer; the BC01 is designed specifically for the Bubble Jet Printer BJ 10sx. Do not vigorously shake the cartridge while handling it. Remove the ink cartridge from the printer only when necessary. CAUTION Keep the ink cartridge out of the reach of children; the ink contains isopropyl alcohol 67630. CAUTION Avoid touching the yellow mounting base on which you place the cartridge especially the circuit board on the side of the mounting base and the film cable that extends from the cartridge holder.

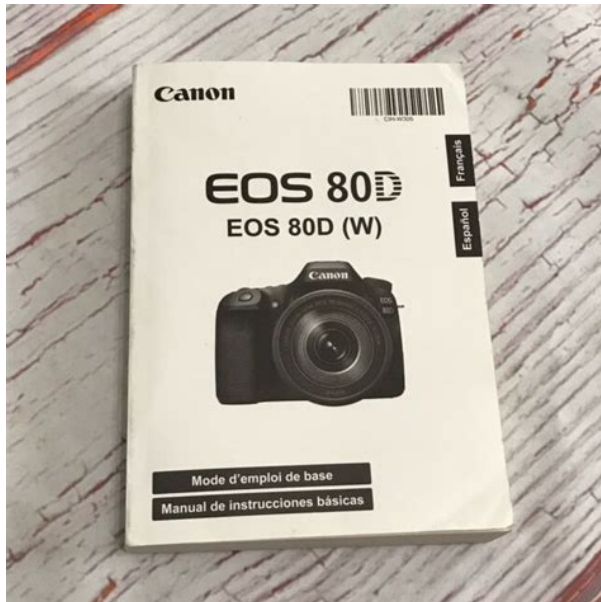

When you are not using the printer, make sure the ink cartridge is in its home position, which is on the left side of the printer. NOTE The print head on a new ink cartridge needs to be cleaned to ensure that you get the best possible print quality. After several seconds, the ON LINE indicator light starts to blink. It blinks for about five seconds while the printer cleans the print head. When complete, the ON LINE indicator light stops blinking and stays on. Therefore, do not remove the ink cartridge. An opened ink cartridge that is not installed in the printer may leak, and the print head may dry out. Attempting to repair the printer yourself may void the warranty. Solution Clear the paper jam as described later in this chapter. Problem Paper loaded in the printer is longer than 15 inches. Solution Remove the paper, and use paper that matches the specifications of the printer. See Appendix A, Printer Specifications, for details. Solution Turn off the printer, wait at least four seconds, and then turn on the printer. Solution Recharge the battery pack. The battery pack is described in Chapter 9, Installing a Options. NOTE If you are using Windows and your output appears jagged, run the printer setup program and make sure the resolution setting is 360 x 360 dpi. Paper Loading Problems. Printout Is Wrong If strange characters appear in your output, there may be a communications problem between the printer and your computer. The printer may be off, offline, or not connected to the computer. If your computer indicates a device timeout, follow these steps 1. Be sure the paper you are using and your printing environment are within the specifications of the Bubble Jet Printer BJ10sx. See Appendix A, Printer Specifications, for details. Inspect the check pattern. There should be a horizontal line between each pair of vertical lines.

If your software application is designed to print only on an Epson LQ printer, you can use the DIP switches to change the printer mode to Epson LQ. The default setting is BJ10e mode. If you change this to Epson LQ mode, the default settings also change. A DIP switch is OFF when it is down, and ON when it is up. If you turn off or reset the printer, or if the printer receives the Set Initial Condition, or if the printer receives the Set. DIP switch 4 If you are using lettersize paper, set this switch OFF;. When this switch is ON, the printer emulates the Canon BJ130e. DIP switch 11 When this switch is OFF, the printer is in BJ10e mode. When this switch is ON, the printer is in Epson LQ mode. DIP switch 4 If you are using lettersize paper, set this switch OFF;. NOTE The printer uses the font specified by your software application regardless of the DIP switch settings. These sheet feeders allow you to automatically feed stacks of paper. The Canon ASF6410 sheet feeder holds up to 30 sheets of paper, and the Canon ASF6420 sheet feeder holds up to 50 sheets of paper. Always press the release button to open the bin. 6. Open the top cover on the printer. 7. Turn on the printer, and start your print operation. NOTE Always remove the sheet feeder before transporting the printer. Cautions Follow these guidelines to avoid damage to your printer or battery pack, and harm to you or others Before using a new battery pack, charge it as described later in this chapter. When

the battery is fully charged, the printer automatically turns off. Using the Battery Pack To print using battery power, follow these steps 1. If you are using the battery pack and the printer does not receive any data for 15 minutes, the printer automatically turns off to save battery power. NOTE When you are not using battery power, turn off the battery switch. Press ON LINE to continue printing. Each time you press ON LINE, the printer will print several lines until the battery pack is fully discharged.

<http://www.infranetltd.com/wp-content/plugins/formcraft/file-upload/server/content/files/1627075973a8ed--boss-vb-2-manual1.pdf>

Pull out the battery pack. 5. Replace the battery compartment cover. 6. Rotate the printer stand back to its original position. You use this interface to connect the printer to a computer. This interface is the most widely used interface on personal computers and does not require setup commands or special configurations on either the computer or printer. PAPER END The printer sets PAPER END high when it is out of paper or when a paper jam occurs. PAPER END remains high until you load paper or clear the jam and press the ON LINE button. When the computer is ready to send a byte of data to the printer, it puts the byte of data on the data lines DATA 1 through DATA 8. Then the computer sends a STROBE pulse to the printer. In this mode, the printer can emulate either the IBM Proprinter X24E DIP switch 10 OFF or the Canon Bubble Jet Printer BJ130e DIP switch 10 ON. Differences between IBM Proprinter X24E emulation and Bubble Jet Printer BJ130e emulation are described following the command summary tables. Also, the styles of block graphics characters at 12 cpi are different from those used by the IBM Proprinter X24E. Each code page has three character sets Character Set 1, Character Set 2, and All Characters Chart. You select the code page by setting DIP switch 9 OFF for code page 437, ON for 850. Also, the styles of block graphics characters at 12 cpi are different from normal Epson LQ510 printing. In addition, the Italics character set has the italics characters between ASCII A0 and ASCII FF. Epson Graphics Character Set NOTE The characters in the shaded areas in the table above change according to the selected international character set. Contents This manual includes all the information you need to set up and operate your printer in several easy-to-read chapters. Battery cover This cover protects the optional battery pack. For information about changing the factory default settings, see Chapter 8, Customizing the Printer.

autoescuelatosal.com/galeria/files/canon-zr45-instruction-manual.pdf

Do not hold the ink cartridge, or place it on a surface, with the print head facing down. This secures the ink cartridge so it makes contact with the circuit board on the cartridge holder. If necessary, obtain an appropriate AC adapter from your Canon dealer. You can also call the Canon help desk at 18004232366. CAUTION Use only the AC adapter that came with your printer. To load multiple sheets of paper, you must install the optional sheet feeder. The ERROR light comes on because there is no paper in the printer. 5. Make sure the paper release lever on the right side of the printer is pushed down. Make sure the side on which you want to print is facing up. NOTE The top of the transparency is where the transparency and its backing are attached. Therefore, do not remove the ink cartridge. You can also use the remaining battery power for limited printing by pressing ON LINE. You can travel with additional battery packs that are fully charged. The indicator lights reflect the current status and modes of the printer. At this time, you can send print data from your computer to the printer. The default is HQ mode. If you want to print a draft document, you can change the print mode to economy and save ink. The printer sounds a short tone about 0.5 second. 5. Repeat steps 3 and 4 for each font style you wish to select. The printer positions the sheet of paper. 6. Press the ON LINE button. The printer starts to print the self test. It is not available in Epson LQ mode. The font list shows Courier characters in several available print styles and pitches. Stopping the font list To stop printing the font list, press the ON LINE button. The Printers dialog box appears. NOTE Your screen may show printer in the Installed Printers box. This program is

located in the printers control panel. If your application software does not list a Canon BJ10sx driver, call your software applications technical support line and ask if a BJ10sx driver is available. BJ10e mode is the default.

Wipe any smudges or dust. CAUTION Make sure the printer is turned off before cleaning it. Do not vigorously shake the cartridge while handling it. CAUTION Do not move the ink cartridge after it is installed. Solution Load Paper. Problem Paper is jammed in the printer. Solution Clear the paper jam as described later in this chapter. Solution Turn off the printer, wait at least four seconds, and then turn on the printer. Paper dust or ink may get clogged in an ink nozzle in the ink cartridge.

Performing the print head cleaning procedure should clear up this problem. The default setting is BJ 10e mode. When this switch is ON, the printer uses Multilingual code page 850. Each code page has three character sets Set 1, Set 2, and the All Characters Chart. Two types of sheet feeders are available for the printer. Charging it before it is fully discharged reduces the battery capacity. Avoid touching the terminals on the battery pack. Make sure the writing on the battery is up and the terminals are down. The actual printing time depends on the complexity of the data you are printing. If you are using the battery pack and the printer does not receive any data for 15 minutes, the printer automatically turns off to save battery power. Press ON LINE to continue printing. A high level indicates a logical 1; a low level indicates a logical 0. The printer reads the DATA lines when it receives a STROBE pulse. This signal is valid only in Epson LQ mode. Each code page has three character sets Character Set 1, Character Set 2, and All Characters Chart. Pages are clean and tight. We handle mainly hardcover and trade paperback editions. We have first editions, signed copies, and just good reading editions. Sales tax of 6.25% applies to purchases made in Texas. All Rights Reserved. Page 3 10sx Table of Contents Page 2 of 2 Cleaning the Print Head. 75 Chapter Customizing the Printer. 77 8 Factory Default Settings. 77 DIP Switch Settings.

Page 4 Chapter 1 Introduction Congratulations on your purchase of the Canon Bubble Jet Printer BJ10sx. With the optional battery pack, you can print documents without AC power, a fully charged battery can print up to 40 pages. You can print on paper, envelopes, or transparencies. Page 6 Using this Manual This section describes the contents and conventions of this manual. Page 7 Chapter 9, Installing and Using Options Describes how to install the options available for the Canon Bubble Jet Printer BJ10sx. The appendices include printer specifications, interface specifications, and summary tables of the BJ10e mode and Epson LQ mode printer commands and characters sets. Page 8 Customer Support Canon provides customer support and service for all Canon printer products. If you have any questions regarding the installation or use of your new printer, don't hesitate to call the Canon Computer Systems Technical Support help desk at 18004232366. If you seem to have an operational problem, try to solve it by referring to the information in Chapter 7, Troubleshooting. Page 9 Chapter 2 Setting up the Printer This chapter describes the steps you follow to unpack and set up your printer. It offers guidelines for using the printer, explains how to install the ink cartridge, and describes how to connect the AC adapter and the interface cable. Unpacking the Printer Carefully remove all items from the box. Page 10 In addition to this Users Manual, you will find these items in the box z z z z z Canon Bubble Jet Printer BJ10sx BC01 ink cartridge AC adapter Quick Start Guide Product Warranty card Registration card If your printer was damaged in shipping, or if any items are missing, notify your dealer immediately. As you unpack the printer, save the carton and packing materials in case you want to ship or store the printer in the future. The various lights on the operator panel indicate the status of the printer and identify the print mode you've selected.

See Chapter 4, Using the Operator Panel, for complete information on these buttons and lights. Parallel interface port The printer's interface cable connects to this port. Page 12 From the Back Printer stand The printer stand is used when printing envelopes, transparencies, or thick paper. Battery switch This switch turns on the optional battery pack if it is installed. Page 13 Inside the

Printer Inner cover This cover provides access to the inside of the printer when you're installing the ink cartridge or changing the DIP switches. **Ink cartridge holder** You install the ink cartridge on this yellow holder as described later in this chapter. Leave the lever in the down position when you are printing. **Page 14 DIP switches** These switches define the printer's settings. **Page 15 To avoid spilling ink, follow these precautions** z Do not touch the print head on the ink cartridge or the sharp edges around it. **CAUTION** Keep the ink cartridge out of the reach of children; the ink contains isopropyl alcohol 67630. To install the ink cartridge, follow these steps **1.** **Page 16 2.** Grasp the recessed tab on each side of the inner cover, and lift the cover toward the front of the printer. **3.** Take the ink cartridge out of its protective packaging. **Page 17 4.** Snap off the orange cap from the print head and then remove the orange tape. **5.** Locate the ink cartridge holder on the left side of the printer. **CAUTION** Avoid touching the yellow mounting base on which you place the cartridge especially the circuit board on the side of the mounting base and the film cable that extends from the carriage holder. **Page 18 6.** Lift the green lock lever on the cartridge holder. **7.** Fit the ink cartridge over the yellow mounting base with the print head facing the back of the printer. **Page 19 8.** Push the lock lever back until it snaps into place. Press on each side until it snaps into the closed position. **10.** Lower the top cover and press on each side to close it securely. **Page 20 1.**

Plug the connector end of the AC adapter into the AC adapter receptacle on the right side of the printer. 2. Insert the AC adapter into the wall outlet. **CAUTION** z If you smell a peculiar odor, or see smoke, unplug the AC adapter immediately. If necessary, obtain an appropriate AC adapter from your Canon dealer. Electrical current flows into the AC adapter when it is plugged into a wall outlet. If you will not be using the printer for some time, unplug the AC adapter from the wall outlet and from the printer. **Page 22 4.** Secure the cable connector by snapping the two wire clips located on the printer into the cable connector. **5.** Connect the other end of the interface cable to the parallel port on your computer. **Turning the Printer On and Off** To turn on the printer, press the POWER button on the operator panel until the printer sounds a beep. The POWER light comes on, and the printer makes several sounds as it gets ready to print. **CAUTION** Never unplug the AC adapter when the power is turned on. **Page 23 Cleaning the Print Head** The print head on a new ink cartridge needs to be cleaned to ensure that you get the best possible print quality. The printer automatically cleans the print head when you follow these steps **1.** Make sure the printer is turned off. **2.** Press and hold the FWD ADJ and REV ADJ buttons, and press the POWER button until you hear the printer beep. **3.** When the printer beeps, release the POWER button. **4.** When the printer beeps again, release the FWD ADJ and REV ADJ buttons. **Page 24 Chapter 3 Using the Printer** This chapter presents the guidelines for locating your printer, describes how to load paper, envelopes, transparencies, and thick paper in the printer, and provides helpful hints for using the printer on a daily basis and traveling with the printer. **Choosing a Location for Your Printer** Whether at home, in the office, or traveling, you need to find a comfortable and convenient location for the printer.

Page 25 z Make sure the printer's location is near an electrical wall outlet that accepts a three-prong, grounded plug when you are using the AC adapter. Attempting to use any other adapter may damage the printer. **Page 26 Envelopes, transparencies, and thick paper** are loaded from the bottom of the printer with the printer resting on the printer stand. See Chapter 9, **Installing and Using Options**, for details. **Selecting Paper** Your printer produces letter-quality output on most plain bond papers, including cotton bond papers and photocopying papers. This printer does not require special inkjet papers. Use cutsheet paper only. Paper will not feed correctly if the lever is up **6.** Insert a single sheet of paper into the printer. Align the paper with the paper size indicator on the left side of the top cover. **Page 29 1.** Make sure you insert the paper so that the side on which you want to print is facing away from you toward the top cover. The printer automatically positions the paper so it is ready for printing. **3.** Press ON LINE and start your print operation. **Selecting Envelopes, Transparencies, or Thick Paper** Use commercial, number 10 envelopes, which are 9.5 by 4. **Page 30 Printing On Envelopes, Transparencies, or Thick Paper** You must load envelopes, transparencies,

and thick paper from the bottom slot of the printer. To load envelopes, transparencies, or thick paper, follow these steps. The illustrations show how to load an envelope; the steps are exactly the same for transparencies or thick paper. 1. Make sure the printer is turned off and the top cover is closed. 2. Grasp the front of the printer with one hand and position the printer stand with your other hand. 3. Page 31 4. Open the top cover. 5. Press the POWER button to turn on the printer. The ERROR light comes on because there is no paper in the printer. 6. Set the paper thickness dial to the bottom position envelope icon. 7.

<https://congviendisan.vn/vi/3x1-optical-audio-toslink-bi-directional-manual-switch>